

ARMSTRONG® REMOTE

POWER
Turns selected device "on/off"

DEVICE SELECTORS
Switches between equipment

HELP
Provides helpful information when pressed in various areas of the Interactive Guide

GUIDE
See program listings for the current time

ARROWS, PAGE + OR -
Use to navigate through the guide

Note: Arrows also control PVR
Fast Forward, Slow FF from Pause ▶
Rewind, Slow Rewind from Pause ◀
Pause, Play ▲
Go to Live TV ▼

INFO
See program information

VOLUME
Used to increase or decrease a program's volume

TV/VCR, BYPASS
Reserved for Future Use

PVR (VCR) CONTROLS
Controls PVR and VCR functions

STOP, PAUSE, PLAY
Rewind, Record, Fast Forward



MUTE
Turns sound "on/off"

LOCK
Restrict viewing with Parental Controls

EXIT
Return to watching television

OK
Select a highlighted item; or, while watching a program, press to display or remove the Flip Bar

MENU
Enter and exit the Main Menu

LAST
Returns to the last channel viewed or last screen in Interactive Guide

A, B AND C
Reserved for Future Use

FAVORITE
Scans through selected favorite channels

CHAN ▲ ▼
Change channels and accesses the Flip Bar


MUSIC
See digital music channels listings

NUMBERS
Press channel numbers, then OK or ENTER to tune to a channel


DAY + AND -
See listings for the next or previous day in Interactive Guide

QUICK START GUIDE

Ordering VOD:

- Press the *VOD button* OR
- Press the *Settings/Menu button* and highlight the On Demand selection  on the on-screen menu and press *OK* or *Select*.
- Using the arrow keys on your remote, select a category. Then highlight a program or movie and press *OK/Select*.

Music Choice:

- Press *Settings twice* to access Digital Music, highlight Digital Music selection  and press *OK* to access.
- Select a music channel by using the Arrow buttons.

Control Live TV*:

- Press *Pause* and the video on your screen instantly freezes; press *Play* to resume program.
- Press *Rewind* or *Fast Forward* up to 4 times to increase speed.
- Press *Pause* and then *Fast Forward* for *Slow Forward* motion or *Pause* and then *Rewind* for slow reverse motion.
- Press *Live* to return to your current programming.

Recording*:

- For One Touch Recording, Press *Record*. Recording begins immediately.
- To Record from Program Information, highlight the Action icon and press *OK*.
- To Schedule a Recording, select *DVR* from the Main Menu and select *Set a Recording*.
- To Record one program and watch another, press the *SWAP* button to switch tuners.

*Must have a PVR to use recording functions.

Should your remote not work properly, please check the batteries before calling Armstrong®