

## USING YOUR REMOTE CONTROL

Find programs with just a few taps of the remote control. Use these quick tips to enjoy full access to your guide.

### 1 INFO

From Live TV:

- Press 1x to Access the **On Now/On Next Banner**
- Press 2x to Display the **TV Listings Grid**
- Press 3x to Display the **Program Information Screen**

### 2 CHANNEL UP (+)/DOWN (-)

- *While watching TV:* Displays **On Now/On Next Banner**.
- *In the TV Listings Grid:* Pages up and down through grid, jumping seven channels at a time



### NUMBER KEYS

Use these numbers to navigate the guide:



### 3 5 AND ENTER

The number 5 works as the OK button and has the same functions as ENTER. While in the guide, pressing either will tune to that channel if the program is airing now.

### 4 LAST

Returns you to the last screen or channel

### 5 LANG (LANGUAGE)

Quick access to audio language settings

## PARENTAL CONTROLS

Set viewing restrictions by channel and rating. Locked programs cannot be viewed until the assigned PIN is entered.

### Setting Up Your PIN

- 1 Press **INFO** on the Remote Control.
- 2 Press **9** to access **Settings**.
- 3 **Parental Control** will be the default.
- 4 Press **6** (right) to **Set PIN**. Notice the status column on the right – it reads **Not Set**.
- 5 A pop-up window appears.
- 6 Enter a 4 digit PIN of your choice.
- 7 The system will prompt you to confirm your PIN again. Once confirmed, the option should now read **Reset PIN**.



### Locking By Ratings And Channels

- 1 Press **INFO** on the Remote Control.
- 2 Press **9** to access **Settings**.
- 3 **Parental Control** will be the default.
- 4 Press **6** (right) to highlight the second column.
- 5 Enter the 4 digit PIN.
- 6 Press 8 (down) to highlight **Channels, Movie Ratings** or **TV Ratings**. The third column will populate with a rating or channel list. A lock or unlock icon will appear next to each.
- 7 Press **6** (right) to access the third column.
- 8 Use the **2** (up) and **8** (down) to navigate the list.
- 9 Highlight the desired channel or rating and press **5** (OK) to initiate the lock. The lock icon will appear.
- 10 If the lock is already set, you can press **5** (OK) to unlock. The icon will change to unlocked for ratings, or be removed for channels.



# ARMSTRONG®

## SD Digital Adapter On Screen Guide

Quick Reference

For more info visit:  
[ArmstrongOneWire.com/DAguide](http://ArmstrongOneWire.com/DAguide)

## WELCOME TO OUR DA GUIDE

Find what to watch quickly and explore programming right from your existing remote control! Press **INFO** to get instant information on what you are watching and move onto other screens using the guide's intuitive browsing experience.

## ON NOW/ON NEXT BANNER

Get instant information on what's currently playing and what's coming up next.

### Accessing What's ON NOW

- Change **CHANNELS +/-** keys while watching TV, or
- Press **INFO** while watching TV



### See What's ON NEXT

- Press the **6** (right) button to see what's 'On Next'
- **ON NEXT** will become highlighted in Orange
- Press **4** (left) to return to what's 'On Now'

### Browsing other Channels

- 1 To browse programming on other channels use the **2** (channel up) and **8** (channel down) buttons. The On Now/On Next Banner will display information for that channel.
- 2 Use the **4** (left) and **6** (right) to toggle between what's 'On Now' and what's 'On Next.'
- 3 To tune to a program airing now, press **5** (OK).

## THE TV LISTINGS GRID

Access seven channels of TV listings at a time, with a 90 minute view of each. Browse multiple hours of continuous program information.

### Accessing the TV Listings Grid

- Press **INFO** from the On Now/On Next Banner



### Program Types and Colors

- **Orange** - Active Selection
- **Magenta** - Kids
- **Blue** - General Programs
- **Purple** - Movies
- **Green** - Sports

### Browsing the TV Listings Grid

- 1 Access the TV Listings Grid.
- 2 Use the numerical keys to move **2** (up), **8** (down) **4** (left), and **6** (right) through the grid one program or channel at a time.
- 3 Use the **CHANNEL +/-** keys to page up and down through the guide (seven channels at a time).
- 4 Highlight a program and quick info will display in the upper left hand corner of the screen.

### Tuning From the TV Listings Grid

Highlight a program airing now and simply press **5** (OK) on the remote control to tune to that channel.

### Turning the Default Help Overlay Off

Press **INFO**, Press **9** (Settings), Press **8** (down) to highlight General Setup, Press **6** (right) for Options, Press **8** (down) until Remote Help Display is highlighted, Press **6** (right) then **8** (down) to highlight Disable, and Press **5** (OK) to select.

## PROGRAM INFORMATION SCREEN

Get in-depth information on TV shows, movies, sports events and more.

### Accessing the Program Information Screen

- Press **INFO** from the TV Listings Grid



### Options

- Press **LAST** to return to the TV Listings Grid
- Press **5** to access Parental Control

## HELP OVERLAY

The Help Overlay offers assistance in using the functions of the remote control keys. **Note:** Pressing 0 anywhere within the guide will toggle the Help Overlay on and off.

