On Demand *Quick Start*

GETTING STARTED IS SO EASY!

Ordering On Demand programming is as easy as 1-2-3:

- 1. Simply tune your set top or TV to Channel 1 OR simply use the **On Demand** or **VOD** button on your remote.
- 2. Using the arrow keys on your remote, select a category. Then highlight a program or movie and press **OK/SELECT**.
- 3. Select **o** to begin watching your choice or **v** to purchase a pay movie or event* and enjoy the show.

*Please note—you will be asked to confirm any selection that requires an additional fee, so there's no "accidental" On Demand purchase.

MORE ON DEMAND TIPS

- To pause, fast forward, rewind or stop a program, use the video control buttons on the remote.
- Once you have selected a program for viewing and have pressed or BUY, please wait a few seconds for the show to start. "ONE MOMENT PLEASE" will appear on your screen, indicating that your program will begin shortly. Repeatedly pressing the OK button will continually restart the process and delay your viewing.
- Programs selected or viewed will be stored in the "My Viewing" folder for 24 hours, so you can watch them again!
- Armstrong Answers tutorial videos available On Demand and at ArmstrongOneWire.com/support.

